



Sony Vaio 6.5x4.4mm PCG-Z1A, VGN-F, PCG-Z1, PCG-Z505 Laptop DC Power Jack

Generuota 2026-08-26

Name

Description

MODELS

Sony 505-Series: PCG-505F, PCG-505FX, PCG-505G, PCG-505GX, PCG-505TR, PCG-505TS, PCG-505TX, PCG-N505, PCG-N505VE, PCG-N505VX Sony F Series: PCG-F180, PCG-F190, PCG-F250, PCG-F270, PCG-F280, PCG-F290, PCG-F340, PCG-F350, PCG-F360 PCG-F370, PCG-F390, PCG-F420, PCG-F430, PCG-F450, PCG-F480, PCG-F490, PCG-F520, PCG-F540, PCG-F560, PCG-F570, PCG-F580, PCG-F590, PCG-F610, PCG-F630, PCG-F640, PCG-F650, PCG-F680, PCG-F690 Sony FX100-Series: PCG-FX120, PCG-FX140, PCG-FX150, PCG-FX170, PCG-FX190 Sony FX200-Series: PCG-FX210, PCG-FX215, PCG-FX200, PCG-FX220, PCG-FX240, PCG-FX250, PCG-FX270, PCG-FX200K, PCG-FX290 Sony FX300-Series: PCG-FX310, PCG-FX340(P), PCG-FX370(P), PCG-FX390(P) Sony FX400-Series: PCG-FX410, PCG-FX430, PCG-FXA32, PCG-FXA33, PCG-FXA36, PCG-FXA35/D, PCG-FXA4, PCG-FXA48, PCG-FXA49, PCG-FXA53, PCG-FXA59, PCG-FXA63 Sony GR-Series: PCG-GR150K, PCG-GR170K, PCG-GR250, PCG-GR250P, PCG-GR290, PCG-GR290K, PCG-GR290P, PCG-GR370, PCG-GR370K, PCG-GR370P, PCG-GR390, PCG-GR390K, PCG-GR390P Sony GRS-Series: PCG-GRS150, PCG-GRS150K, PCG-GRS150P, PCG-GRS170, PCG-GRS175, PCG-GRS300, PCG-GRS700, PCG-GRS750 Sony GRV-Series: PCG-GRV550, PCG-GRV570, PCG-GRV670P, PCG-GRV680, PCG-GRV680P Sony GRX-Series: PCG-GRX500, PCG-GRX500K, PCG-GRX501, PCG-GRX501K, PCG-GRX510, PCG-GRX510K, PCG-GRX520, PCG-GRX520K, PCG-GRX520P, PCG-GRX530, PCG-GRX530K, PCG-GRX530P, PCG-GRX550, PCG-GRX550K, PCG-GRX550P, PCG-GRX560, PCG-GRX560K, PCG-GRX560P, PCG-GRX570, PCG-GRX570K, PCG-GRX570P, PCG-GRX580, PCG-GRX580K, PCG-GRX580P, PCG-GRX590, PCG-GRX590K, PCG-GRX590P, PCG-GRX650, PCG-GRX650P, PCG-GRX670K, PCG-GRX670P, PCG-GRX690, PCG-GRX690K, PCG-GRX690P, PCG-GRX700, PCG-GRX700K, PCG-GRX770 Sony GRZ-Series: PCG-GRZ530, PCG-GRZ600, PCG-GRZ610, PCG-GRZ630, PCG-GRZ60 Sony NRV-Series: PCG-NVR23, PCG-NVR17, PCG-NVR17K, PCG-NVR27, PCG-NVR27K, PCG-NVR33, PCG-NVR33K, PCG-NVR5K, PCG-NVR7K Sony N505-Series: PCG-N505VE, PCG-N505VX, PCG-N170, PCG-N170P, PCG-N190, PCG-N190P, PCG-N200, PCG-N290 Sony R505-Series: PCG-R505D(CTO), PCG-R505DF(P), PCG-R505DL(P), PCG-R505DS(P), PCG-R505D(CTO), PCG-R505DFK, PCG-R505DLK, PCG-R505DSK, PCG-R505E(CTO), PCG-R505EC(P), PCG-R505EL(P), PCG-R505ES(P), PCG-R505E(CTO), PCG-R505ECK, PCG-R505ELK, PCG-R505ESK PCG-R505G(CTO), PCG-R505GC(P), PCG-R505GL(P), PCG-R505G(CTO), PCG-R505GCK, PCG-R505GLK, PCG-R505JE, PCG-R505JS, PCG-R505JSP, PCG-R505JEK, PCG-R505JLK, PCG-R505JSK, PCG-R505JL, PCG-R505JLC, PCG-R505TE, PCG-R505TS, PCG-R505TEK, PCG-R505TSK, PCG-R505TL, PCG-R505TLK Sony SR Series: PCG-SR17, PCG-SR17K, PCG-SR27, PCG-SR27K, PCG-SR33, PCG-SR33K, PCG-SR5K, PCG-SR7K Sony SRX-Series: PCG-SRX77, PCG-SRX87, PCG-SRX99, PCG-SRX99K, PCG-SRX99P Sony TR-Series: PCG-TR1A, PCG-TR1AP, PCG-TR2A, PCG-TR2AP Sony VX-Series: PCG-VX88, PCG-VX88P, PCG-VX89, PCG-VX89K, PCG-VX89P Sony XG-Series: PCG-XG18, PCG-XG19, PCG-XG28, PCG-XG28K, PCG-XG29, PCG-XG29K, PCG-XG38, PCG-XG38K, PCG-XG39, PCG-XG39K, PCG-XG500, PCG-XG500K, PCG-XG700, PCG-XG700K Sony Z1A-Series: PCG-Z1A1, PCG-Z1AP1, PCG-Z1AP2, PCG-Z1AP3, PCG-Z1RA, PCG-Z1RAP1, PCG-Z1AP2, PCG-Z1AP3

MANUFACTURER CODE

-

DIMENSIONS

6.5 x 4.4 mm

CODE

-