

Acer Aspire A515-51 A515-51G A515-41G A517-51 klaviatūra su pašvietimu

Generuota 2026-07-04



Pavadinimas

Aprašymas

KODAS

-

MODELIAI

1F144505205M KB.I170A.409 KB.I170A.410 KB.I170G.317 KB.I170G.318 MP-10K33U4-6983
NK.I1713.066 NK.I171S.00W PK130HJ1B00 PK130HQ1A00 PK130HQ3A00 PK130IN1A00
PK130IN1B00 PK130IN2A00 V121702AS2 V121702FS1 AERTG00010 NK.I1513.00J NKI151300J
PK131FZ1A10 PK131NX1A19 Tinka šiems modeliams:Acer Aspire E5Acer Aspire V3Acer Aspire
E5-573TAcer Aspire E5-575Acer Aspire E5-522Acer Aspire E5-772Acer Aspire 5 A515-51Acer
Aspire F5Acer Aspire E5-553Acer Aspire 3Acer Aspire V5Acer Aspire 3 A314-32Acer Aspire 3
A315-21Acer Aspire 3 A315-21GAcer Aspire 3 A315-31Acer Aspire 3 A315-32Acer Aspire 3
A315-51Acer Aspire 3 A315-52Acer Aspire 3 A315-51GAcer Aspire 5Acer Aspire 5 A515-52Acer
Aspire E5-523Acer Aspire E5-532Acer Aspire E5-532GAcer Aspire E5-552Acer Aspire
E5-573GAcer Aspire F15Acer Aspire F15 F5-573GAcer Aspire F5-571Acer Aspire F5-573Acer
Aspire F5-771GAcer Aspire N16C1Acer Aspire N16C2Acer Aspire N16Q2Acer Aspire N16Q3Acer
Aspire N16Q5Acer Aspire V15Acer Aspire V3-574Acer Aspire V5-591GAcer Aspire VN7Acer
Aspire VN7-572GAcer Aspire VN7-592GAcer Aspire VN7-792G A315-56 A515-53 A515-54
A515-55

GAMINTOJO KODAS

-

IŠMATAVIMAI

-